

Courtyard High Definition Log Set

MODEL: HDLOGS-ODCOUG

Installation Instructions

For use with the Courtyard Outdoor Gas Appliance



Leave this manual with party responsible for use and operation.

CAUTION! Risk of Injury. Wear protective gloves and safety glasses during installation. Loose log fibers could cause skin irritation.

CAUTION: Logs are fragile, handle with care.

NOTICE: To simplify the installation process, positively identify each individual log before beginning installation.

NOTE: Before beginning the log installation the grate must be positioned correctly. It must be placed behind the grate retainer tabs on the left and right side of the burner assembly. The rear grate legs slide into the gaps on the left and right side of the burner assembly and must be forced down into place. Once the rear grate legs are in place, the grate should be pulled forward until fully engaged with the grate retainers on both sides. Failure to place grate correctly will result in diminished flame appearance and sooting. See Figure 1.

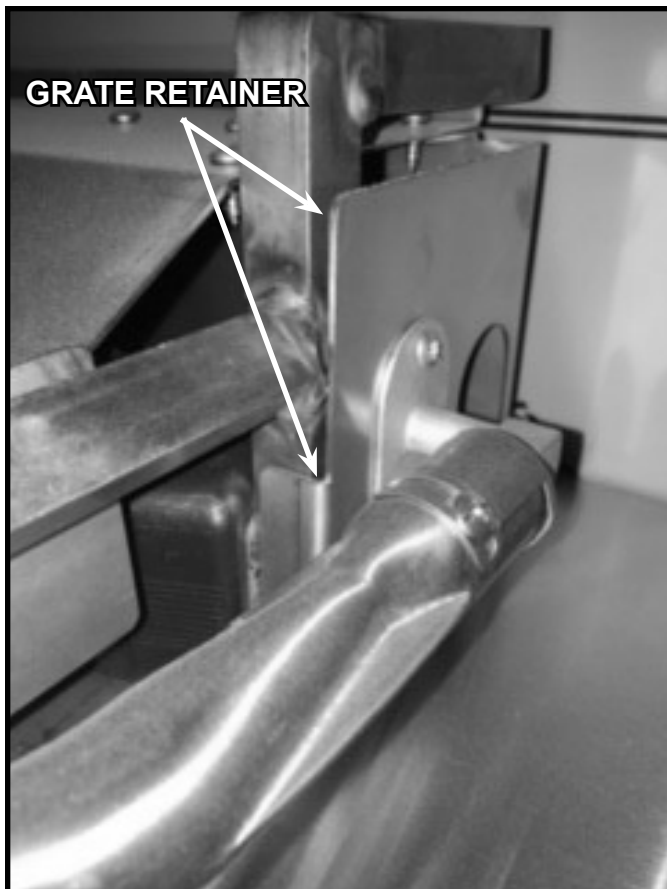


Figure 1. Position the Grate

1. Locate the two log pins provided in the homeowner's manual package shipped with the appliance. Install the two log pins on top of the rear burner cover using the screws in the rear burner cover.
2. Install log #1 on the right rear pin. This log also has a notch to fit over the grate as shown in Figure 2.
3. Install log #2 on the middle pin with the log angled to the left. See Figure 3.

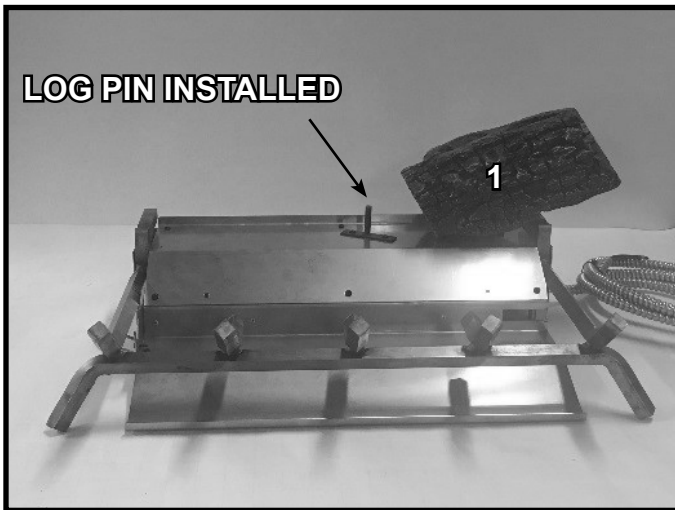


Figure 2. Install Log #1

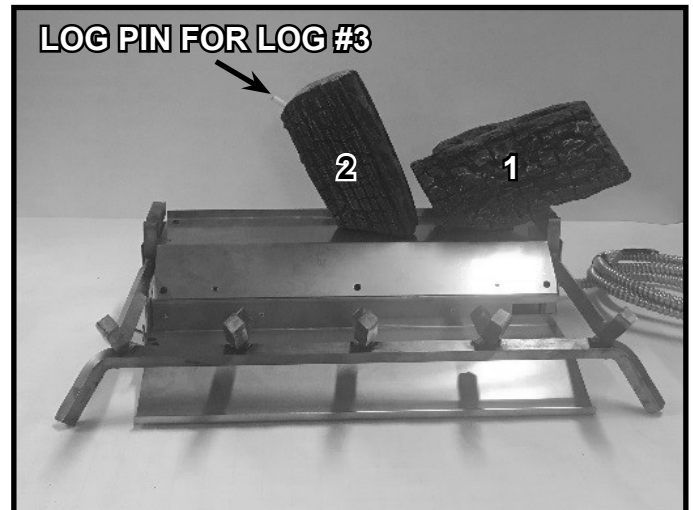


Figure 3. Install Log #2

4. Install Log #3 by engaging the hole on the bottom of the log with the log pin on the top of Log #2, shown in Figure 3. Place the other end of Log #3 on the left grate on top of the rear cover as shown in Figure 4.
5. Note the V-shaped grooves on the bottom of Log #4. Set Log #4 on the two front right side grate tines at an angle from front left to rear right as shown in Figure 5. Move the log until the grate tines engage with the V-shaped grooves on the bottom of the log. The right rear of Log #4 will rest on the burner tube bracket.

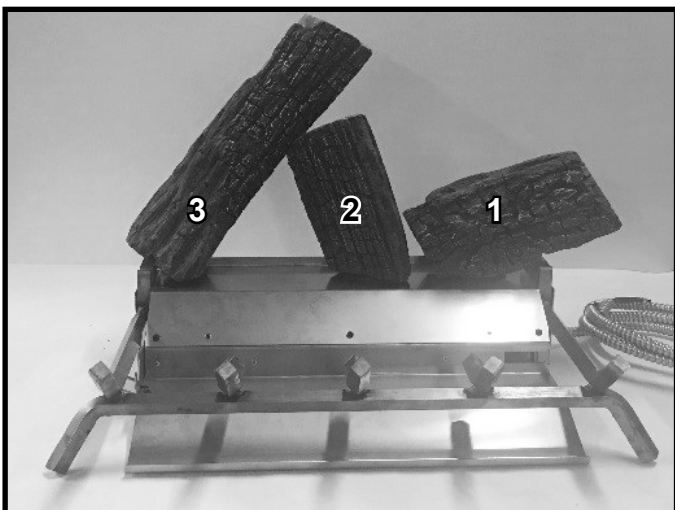


Figure 4. Install Log #3

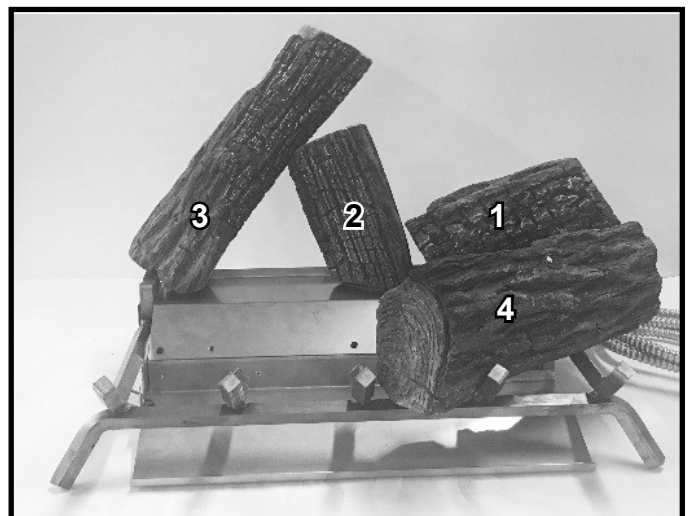


Figure 5. Install Log #4

6. Note the V-shaped grooves on the bottom of Log #5. Set Log #5 on the two front left side grate tines at an angle from front right to rear left as shown in Figure 6. Move the log until the grate tines engage with the V-shaped grooves on the bottom of the log. When properly placed the two front logs will contact in the center and angle back toward the rear of the burner assembly. The left rear of Log #5 will rest on the burner tube bracket.
7. Log #6 has a hole that is located on the back and will engage with the pin on Log #5. The “V” or “fork” of the log will rest on the left side grate tine as shown in Figure 7.

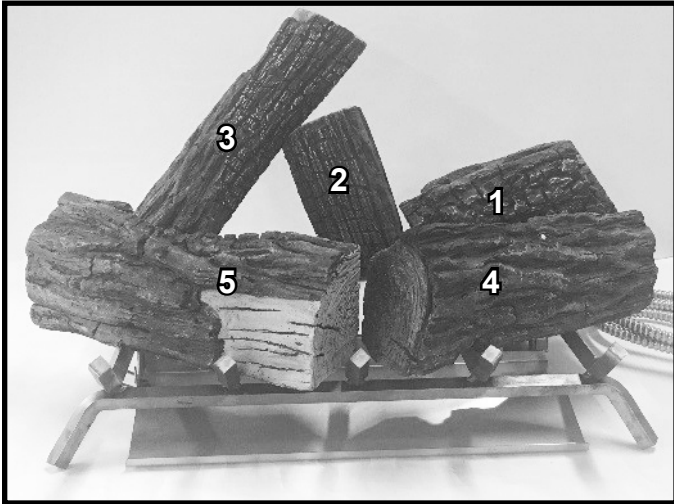


Figure 6. Install Log #5

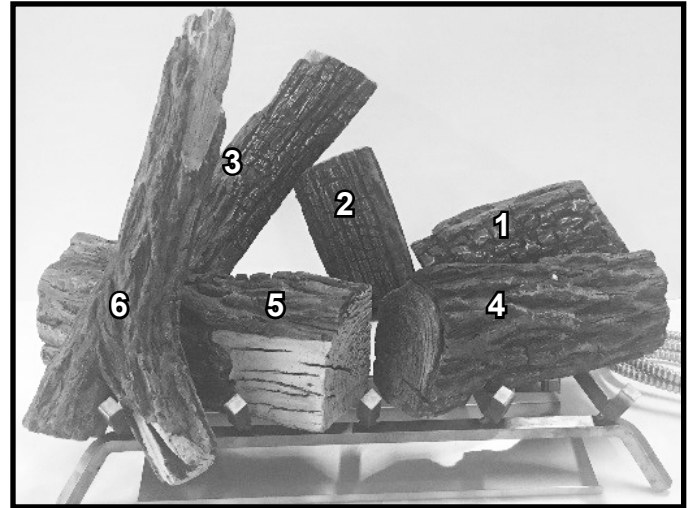


Figure 7. Install Log #6

8. Log #7 has a hole located on the back which will engage with the pin located on the right front log (Log #4). This log has a notch on the lower left side which will contact the outside of the right grate tine as shown in Figure 8.
9. Log #8 has a hole in the bottom of the log that will engage on the top of the right front log (Log #4). Log #8 also has a notch that will engage with Log #3 as shown in Figure 9.

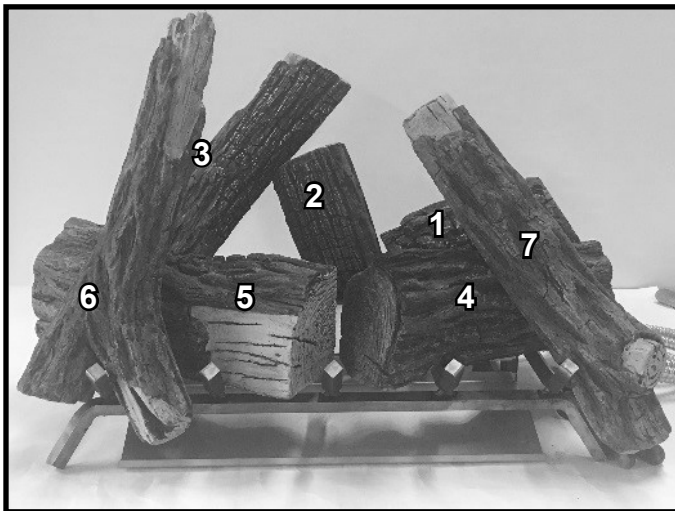


Figure 8. Install Log #7

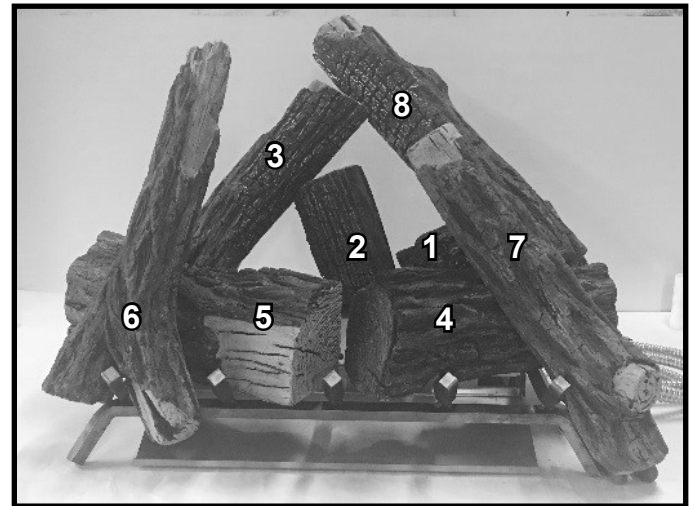


Figure 9. Install Log #8

Outdoor Lifestyles, a brand of Hearth & Home
Technologies
7571 215th Street West, Lakeville, MN 55044
www.hearthnhome.com

Please contact your Outdoor Lifestyles
dealer with any questions or concerns.
For the location of your nearest Outdoor Lifestyles
dealer, please visit www.hearthnhome.com.

High Definition Log Service Parts	
Description	Part Number
HD LOG #1	SRV4608-354
HD LOG #2	SRV4608-355
HD LOG #3	SRV4608-356
HD LOG #4	SRV4608-357
HD LOG #5	SRV4608-358
HD LOG #6	SRV4608-359
HD LOG #7	SRV4608-360
HD LOG #8	SRV4608-361